

Repairing a Broken Hinge


Supplies:

Single Stitched Binder Tape
Norbond Adhesive
Scissors
Brush
Waxed Paper
Folder
Rubber Bands
Weights

1. Cut and trim away all excess paper and threads of the super from the original hinge.




2. Cut a piece of single-stitched binder tape equal to the height of the book's contents. Apply Norbond Adhesive with a brush to one gummed surface of the tape.

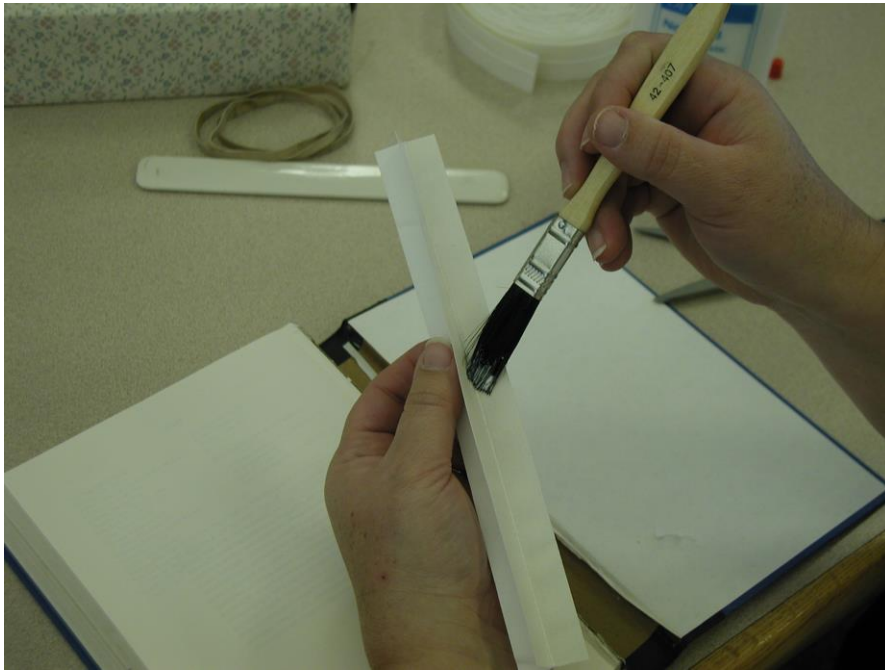


3. Apply one tab of the moistened tape to the spine of the book. Apply the second tab around the corner of the contents and attach to the first or last page. Rub smoothly and firmly with the bone folder.



4. Place a piece of waxed paper cut to the size of the book's content against the book content in the super.

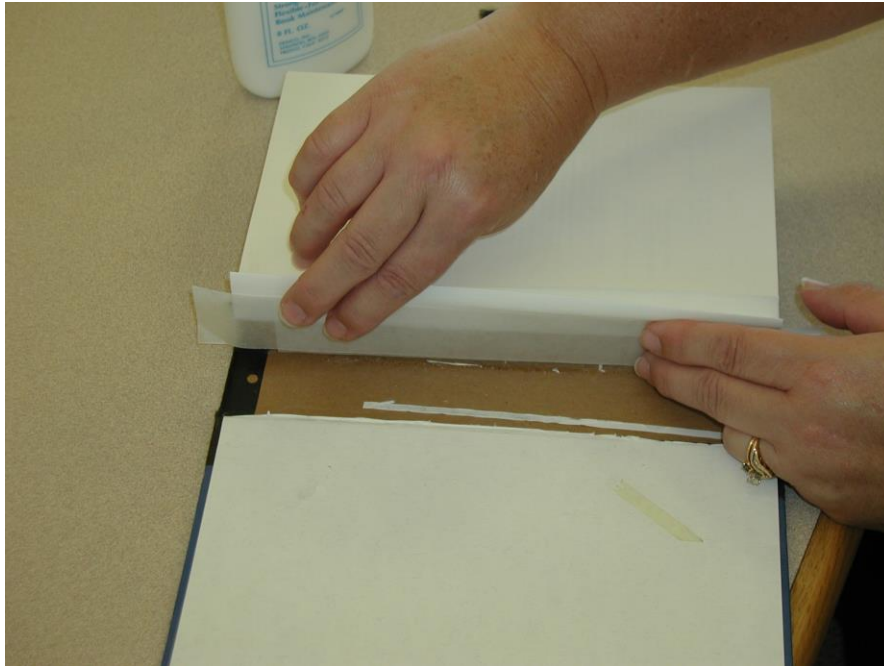

5. Apply Norbond Adhesive to the other gummed surface of the tape. Then carefully press the spine of the cover against the moistened tape and press firmly.

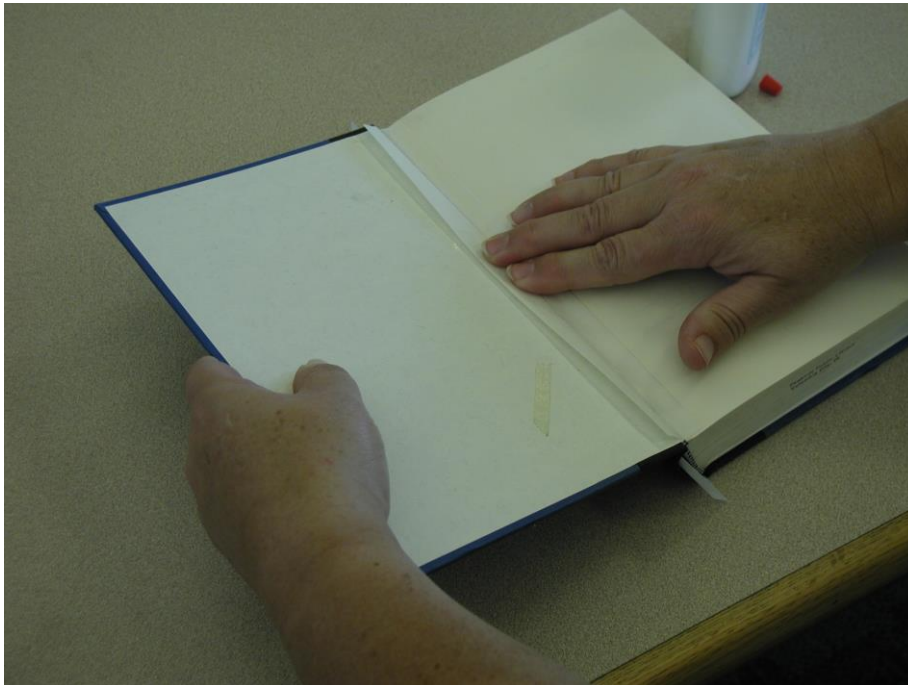

6. Attach the remaining tab of the tape to the cover board. Press firmly and smooth with the bone folder. The binder tape should now hold the firmly to the spine of the text block.



7. Insert a sheet of waxed paper between the cover and the contents. Close the cover, making sure the cover and the contents are in proper alignment. Place rubber bands around the book and place it under weights. Set the book aside to dry.

